


Date Printed: 06/16/2009

JTS Box Number: IFES_76
Tab Number: 114
Document Title: Voting is Easy on Shouptronic Machines
Document Date: nd
Document Country: United States --
Virginia
Document Language: English
IFES ID: CE02527




* 8 5 0 2 2 B 2 3 - D 5 8 3 - 4 2 C 0 - A A A 2 - F 0 3 5 E 7 5 D 2 6 2 E *

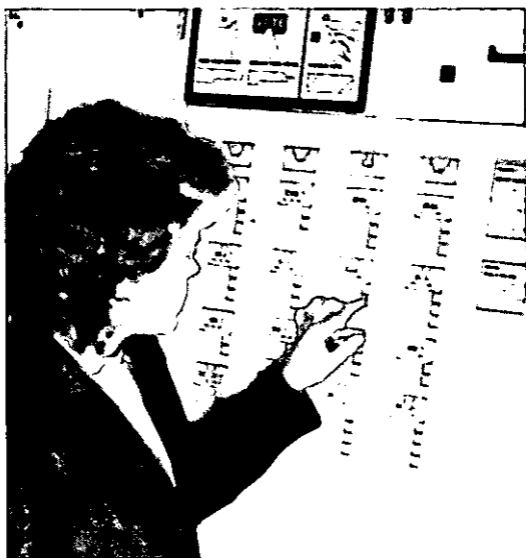

VOTING IS EASY ON SHOUPTRONIC MACHINES

1. Part curtains, enter machine and drop curtains behind you.
2. Blinking red lights on the ballot indicate office for which you may vote.
3. To vote for the candidate of your choice, push the square next to the candidate's name. A solid red light will appear.
4. If you change your mind, push the lit square again, the blinking light will reappear and you may make a new selection.
5. Vote for each office in the same manner as described in number 3.
6. After you have made all your selections press the green "VOTE" button in the lower right corner of the ballot to record your vote.
7. Part the curtains and leave the voting machine.

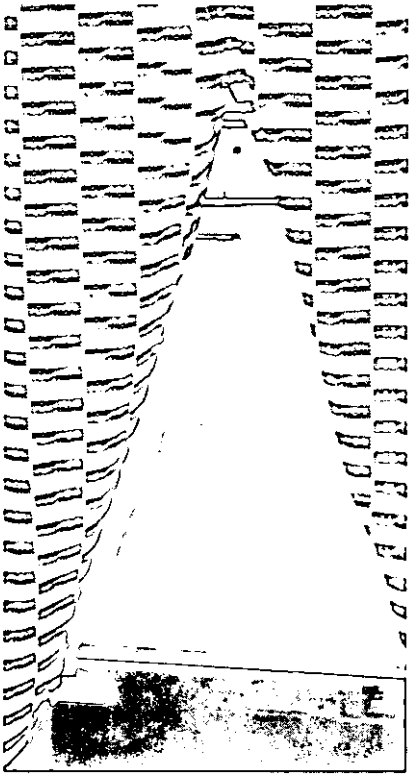

- **NO OVERTVOTE POSSIBLE:** Because of built-in safeguards it is impossible for inaccuracies to occur.
- **VOTER PRIVACY:** U-shaped privacy curtain is attached to top of console to *fully conceal voter* when in booth.
- **LIGHTS TO DIRECT VOTER TO ALL OFFICES:** A red light beside office titles flashes until all available selections for that office have been made.
- **BALLOT ANGLED FOR EASY REACH:** a 20° tilted ballot is within easy reach of *all* voters.

FAIRFAX COUNTY ELECTORAL BOARD
4031 University Drive
Fairfax, Virginia
246-8695